



READ THIS NOW

Ultimate Unpacking Instructions

1. UNPACKING YOUR LOUDSPEAKERS

NOTE: When lifting the loudspeakers out of the packing hold them around the sides of the cabinet. Do not lift at the end of the cabinet with the spikes, as you may damage the woofer (figure 3).

Do not lift the loudspeakers by the DDD driver support pillars (figure 4) as this may damage the driver.

Do not remove the shipping supports fitted in the spike mounting holes on the base of the loudspeaker, as the woofer may be damaged if the loudspeaker is stood up without these fitted. Instructions for fitting the spikes follow later in this manual.

Each Ultimate weighs approximately 29kg (64lbs) and should not be lifted by one person alone. Always have help when lifting a loudspeaker.

The DDD drivers may be protected with clear film. We recommend that this be left in place until the loudspeakers have been placed in their final location, so as to guard against accidental damage during handling.

The Ultimate is supplied with each loudspeaker packed separately in a double carton. This must be kept horizontal as shown in figure 1. Before opening the cartons, please inspect them for damage. If you see any damage, please contact the supplying audio dealer immediately and provide them with a full description of the damage. Do not attempt to unpack the loudspeakers until you have spoken with the dealer and have been advised how to proceed.

To unpack the loudspeakers please follow the instructions below:

NOTE: When cutting the sealing tape on the inner and outer cartons make sure that the cutter blade does not penetrate more than 1cm into the carton.

1. Place the carton upright as shown in figure 1 and carefully cut the sealing tape.

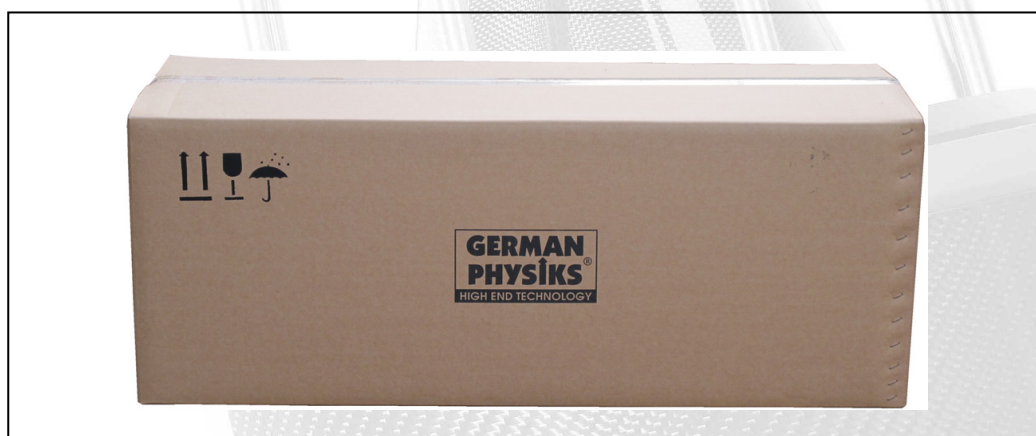


Figure 1. Ultimate Shipping Carton

2. Open the flaps on the outer carton then carefully cut the sealing tape on the inner carton.
3. Open the flaps on the inner carton and remove the three foam packing pieces B and C in figure 2.



Figure 2. Ultimate Shipping Carton

4. Lift the loudspeaker out of the box by supporting it under the sides of the cabinet and stand it upright on its shipping supports. Do not lift by the DDD driver – see figure 4. When lifting the loudspeaker from the vertical is necessary to place one hand under the base of the loudspeaker. To avoid damaging the woofer, ensure that you only support the base of the loudspeaker by the underside of the cabinet - see figure 3.



Figure 3. Ultimate Woofer

Please confirm that the cartons contain the following items

Item	Quantity	Description
1	2	Ultimate Loudspeakers
2	1	Ultimate User Manual
3	1	Cleaning Cloth
4	8	Spikes
5	8	Spike Support Feet
6	8	Self adhesive felt pads

If any items are missing, or show signs of damage, please contact the supplying dealer immediately.

Please retain all of the packing, as you will need this should it be necessary in the future to ship the loudspeakers. The use of any other packing may result in the loudspeakers sustaining damage in transit. Such damage is not covered by the warranty. Should you require replacement packing, please contact your German Physiks dealer, the national distributor or the factory directly.

2. THE PRINCIPLE FEATURES OF THE ULTIMATE

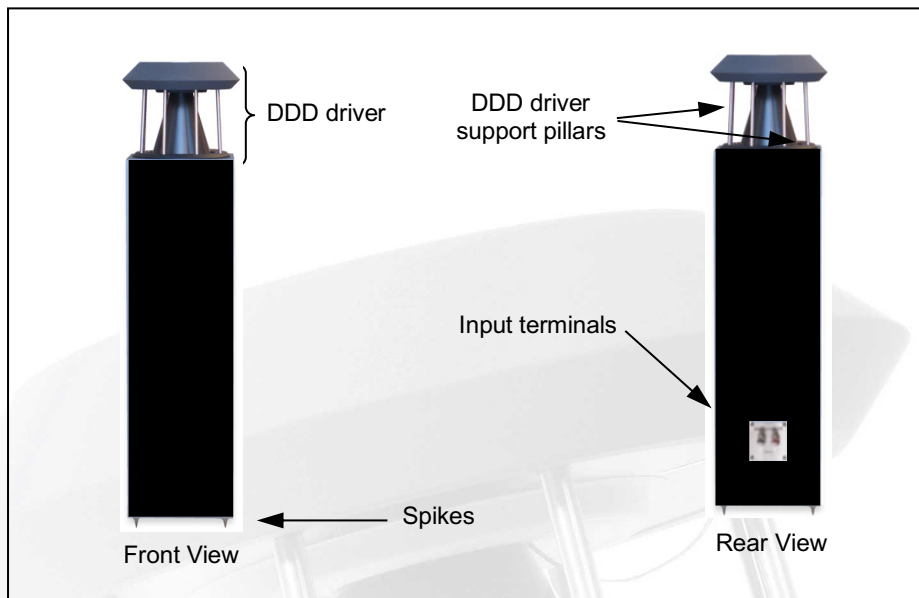


Figure 4. Principle Features of the Ultimate